Specification

- VXPROI- Pentium MNWX PCI chipset, supports 75~233 MHz Pentium CPUs at 50/60/66/75 MHz external clock speed with P54C and P55C, Cyrix/IBM 6x86/6x86L/6x86MX, IDT C6 and AMD K5/K6 CPUs
- Provides auto switching power from 2.5V to 3.5V for CPU core voltage
- Supports four 72-pin SIMM & two 168-pin DIMM EDO/FPM modules auto banking in multiple configuration up to 128MB, and 512KB onboard Pipelined Burst synchronous cache
- Two 16 bits ISA Bus slots and four PCI Local Bus slots
- System BIOS supports NCR810 SCSI BIOS firmware, "Plug & Play" Flash ROM, and four IDE harddisk drives without device driver for S/W application and the capacity of each harddisk can be larger than 528MB up to 8.4GB
- Supports AMI BIOS Multi-Setup function including WINBIOS Setup and Simple BIOS Setup
- Onboard PCI IDE interface with two connectors supports four IDE devices in 2 channels and the PCI IDE Controller supports PIO Mode 0~4 at maximum transfer rate of 16.67MB/s
- Onboard super Multi-I/O chip supports two serial ports with 16550 Fast UART compatible, one parallel port with EPP and ECP capabilities, and one floppy disk drive interface

Onboard Sound Pro supports:

- Sound Blaster 16/PRO compatible with stereo voice up to 48KHz sampling rates, HRTF 3D Positional Audio Technology.
- ----Windows Sound System V2.0 compatible, Accelerates Direct Sound 3D in Win95, and Windows 95/31 & DOS drivers supported.
- Supports 44.1K digital audio(SPDIF)IN/OUT, HSP-23 Wavetable synthesizer, Full Duplex 16-bits CODEC with filters, and High quality 3D sound(ON/OFF controllable), and device supports SB16, WSS and Game.
- Stereo Mixer supports analog mixing from CD-Audio & Line-In, supports digital mixing from Voice, FM/Wave-table & digital CD-Audio.

MainBoard Pertium®///X/X™ VX pro-II PCI Chipset

Jumper Settings

JP13(A,B,C,D,E): CPU Core Voltage Selectors

	Setting		Setting
3.5V	A B C D E	2.9V	A B C D E
3.3V	A B C D E	2.8V	A B C D E
3.2V	A B C D E	2.5V	A B C D E

JP8: Flash ROM Voltage Jumper

DescriptionJP812 Voltage Flash
programming112V
5V5 Voltage Flash
programming112V
5V

J5: COMS RAM Discharge Jumper

Description	J5
Normal Mode	1
Clear CMOS	1

JP3: Sound Pro Selector

Description	Setting
Enable	
Disable	В

JP4: Microphone Type Selector

Description	Setting
Special	Β
Normal	

The information presented in this publication has been carefully checked for reliability ; however, no responsibility is assumed for inaccuracies. Specifications are subject to change without notice

Trademarks

IBM,PC/AT, and PC/XT are trademarks of International Business Machines Corporation.

Intel and Pentium are trademarks of Intel Corporation.

AMD is a trademark of Advanced Micro Devices Inc.

Cyrix is a trademark of Cyrix Corporation.

IDT is a trademark of Integrated Devices Technology Corporation.

AMI is a trademark of American Megatrends Inc.

MS-DOS and WINDOWS NT are registered trademarks of Microsoft Corporation

Jumper Settings

Component Locations

JP9: CPU Type Jumper



JP5~7: CPU Speed Jumpers	,	JP10, 11: CPU Internal Clock Speed Jumpers			
CPU JP5 JP6 JP7	IDT	Intel	Cyrix	AMD	JP10 JP11
Clock JI O JI O JI V 50MHz 1 1 1	Reserved	1.5X/ 3.5X	Reserved	K5 1.5X/ K6 3.5X	
55MHz 1 1 1	Reserved	2.0X	2.0X	Reserved	
60MHz 1 1 1 1	Reserved	2.5X	M2 2.5X	2.5X	
66MHz 1 1 1 1	C6 3.0X	3.0X	M2 3.0X	K6 3.0X	
75MHz 1 1 1 1		1			



Quick Installation Guide

- 1. Set J5 to CMOS RAM discharge jumper (pin 1-2)
- 2. Set JP5~JP7 to select CPU speed
- 3. Set JP10, JP11 to select CPU internal clock speed
- 4. Set JP13(A, B, C, D, E) to select CPU core voltage
- 5. Insert CPU to CPU socket
- Insert DRAM modules into SIMM1~4 & DIMM1,2 and notice that DIMM1 and SIMM1,2 or DIMM2 and SIMM3,4 can not be installed at the sametime.
- 7. Install mainboard into system chassis
- 8. Connect keyboard to KBD1
- 9. Insert display card and other peripheral cards(if required) onto the mainboard
- 10. Connect harddisk(s) to IDE1/IDE2
- 11. Connect floppy drive(s) to FDC1 connector
- 12. Connect serial ports to COM1 and COM2 connectors
- 13. Connect parallel port to PRN1 connector
- 14. Connect J1/J2 to "AUDIO" on the CD-ROM drive
- 15. Connect J8(1,2) to "DIGITAL AUDIO"on the CD-ROM drive.
- 16. Connect SOUND & GAME to the Game & Sound ribbon cable/bracket.
- 17. Connect J7(HDD LED) to "Hard Disk Busy" LED on the system chassis
- 18. Connect J7(RST) to Reset Switch on the system chassis
- 19. Connect J7(SPK) to Speaker on the system chassis
- 20. Connect J7(KEYLOCK) to keylock and power LED on the system chassis
- 21. Connect power cord to PWR1 Power Supply Connector
- 22. Close system chassis, connect all external cables to your computer.

Connectors

- COM1/2: Serial Port #1/#2 PRN1: Parallel Port FDC1: Floppy Disk Port IDE1/IDE2: Primary/Secondary IDE Ports KBD1: Keyboard Connector PWR1: Power Supply Connector J7(KEYLOCK): Keylock & Power LED Connector J7(SPK): Speaker Connector J7(RST): Reset Switch Connector J7(HDD-LED): Hard Disk LED Connector USB1: 2 set of USB Connector
- J1/J2: Analog Audio for Sony/Panasonic Connect to CD-ROM drive

J8(1,2)/J8(3,4): Digital Audio IN/OUT

SOUND & GAME: Game & Sound Connector Sound contains Line-in, MIC(Microphone)and Line-out(Speaker). Game connector is also the Joystic connector. Please connect SOUND & GAME to the Sonnd & Game ribbon cable/bracket as follows:



IR1: Infra Red

pin	Description	pin	Description
1	RD(Lo)	5	RD(Hi)
2	Ground	6	+5VDC
3	TD	7	Ground
4	+5VDC		

FAN-PWR: Fan Power

pin	Description
1	+12VDC
2	Ground
3	Ground
4	+5VDC