

Important Information for Tandy®1000 EX Owners


Printer Cable

The proper printer cable to use with your computer is either the six-foot or the twelve-foot Shielded Printer Cable (Cat. No. 26-225A or 26-222A). Please disregard the catalog numbers for suggested printer cables listed in Chapter 1 of *Introduction to the Tandy 1000 EX*.

Caution: Do not use a standard parallel printer cable with your computer. Use the shielded cable to prevent interference with radio and television reception and to comply with FCC rules and regulations.

To connect the shielded cable:

1. Be sure all equipment is turned off. Connect the plug end of the printer cable to your printer.

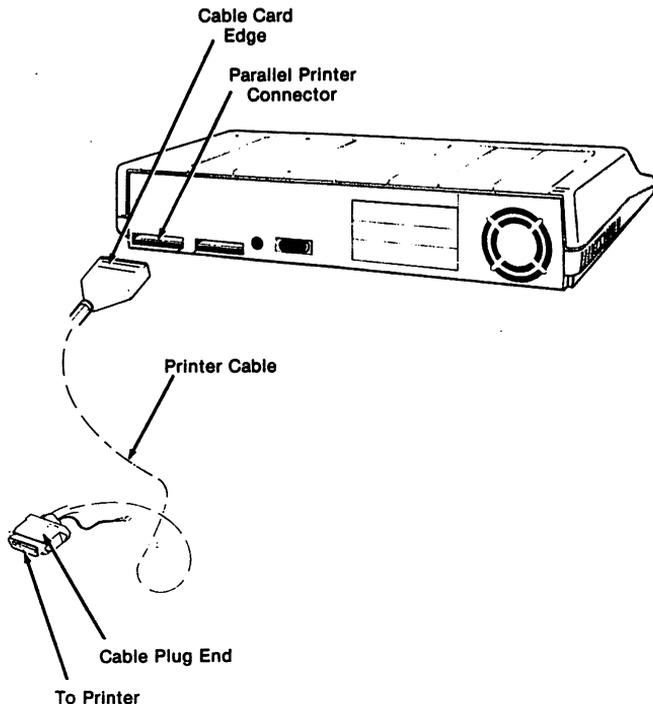

2. Most printers have removable screws on both sides of their computer interface connector. Connect the ring terminal on the cable's plug end ground wire to one of these screws. The screw serves as a ground connector.
3. Connect the printer cable's card edge connector to the Parallel Printer connector on the back of your computer. (The top of the cable card edge connector is marked. Be sure you connect the cable with the top up.)